


LUDWIG GHOST PEDAL INSTRUCTIONS

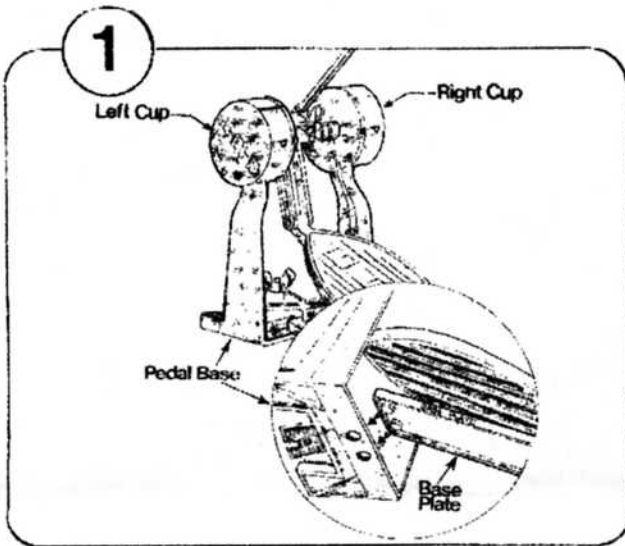


Your Ludwig Ghost Pedal has been carefully constructed using only the finest materials available. We are sure you will be pleased with the response of the "Ghost Pedal" and thank you for your confidence in Ludwig Percussion Products.

SET UP:

1. Remove pedal from carton and set up as shown in figure (1). Be sure base plate pins are mounted into receiver holes of pedal base.
2. Mount pedal to bass drum and secure toe clamp to bass drum hoop. Next, insert pedal beater and you are ready to play.


NOTE: Your new Ghost Pedal is pre-set at the factory for most playing conditions and should not require further adjustments. Should your personal taste require a change in length of stroke or pedal tension, please follow the optional instructions carefully.

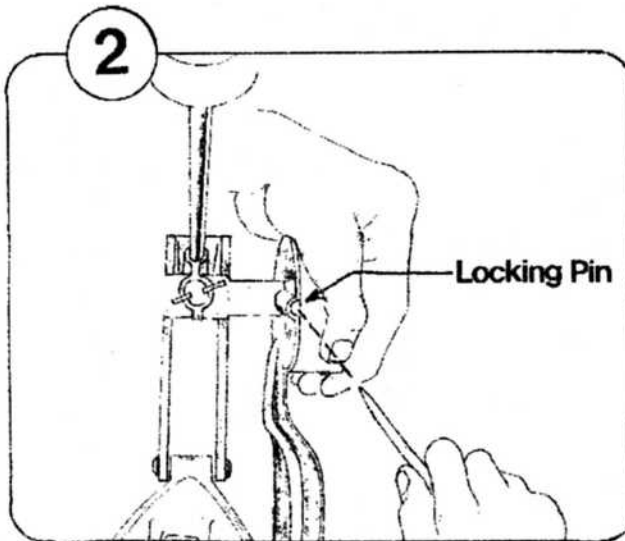

OPTIONAL ADJUSTMENTS

To Increase Tension:

1. **FIRMLY GRIP RIGHT TENSION CUP** and insert pointed object (as illustrated in figure (2)), to depress locking pin. Maintain slight pressure on pin and rotate cup toward the drum two (2) or more stops. A click sound will be heard as you pass each stop.
2. **FIRMLY GRIP LEFT TENSION CUP** and follow the same procedure rotating the left cup away from the drum the same number of stops.

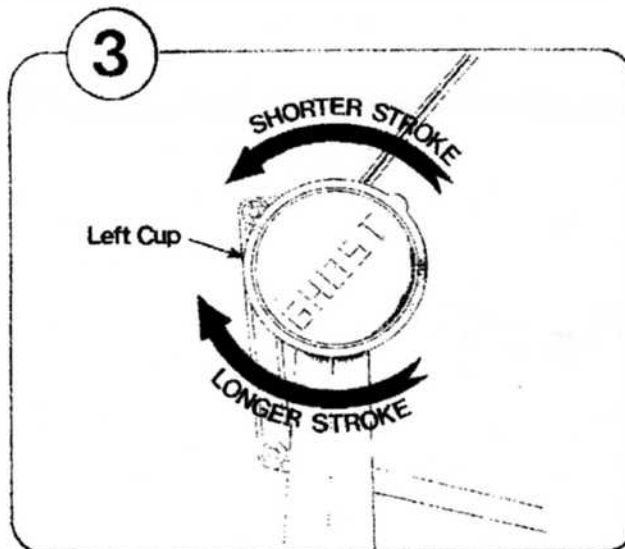

TO ADJUST STROKE

1. To adjust stroke (travel) of beater ball use left cup only. (as illustrated in figure (3)).
2. **FOR SHORTER STROKE** depress pin and rotate left cup towards drum. (counter-clockwise)
3. **FOR LONGER STROKE** depress pin and rotate left cup away from drum. (clockwise)

NOTE: If cups have been improperly adjusted or you "lose your place" when adjusting cups for tension, rotate both cups and align letter "P" (Pre-Set) with locking pins on both cups as illustrated in figure (1).